GB FL 243

PROGRAMME TABLE

Whirlpool is a registered trademark of Whirlpool U.S.A.

Cotton
Synthetic
Delicate/Wool
On/Off
Half load
No spin
Rinse hold

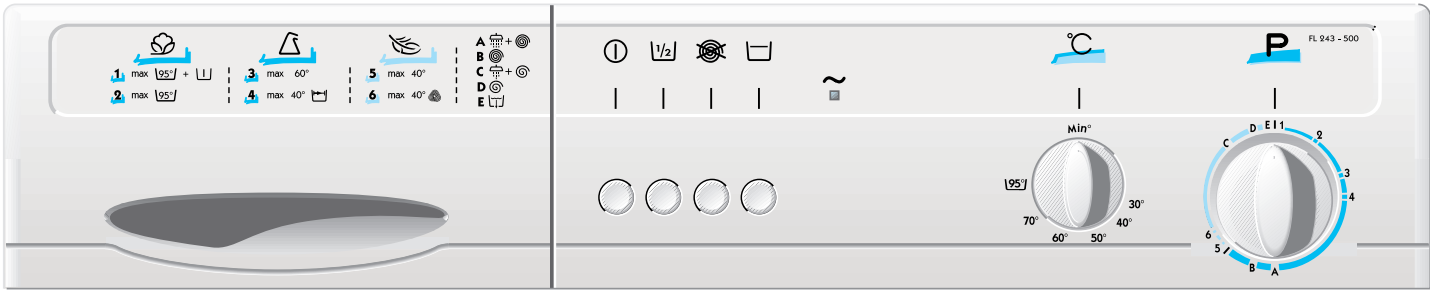

Programme		Type of textiles / Degree of soiling	Max. Load	Detergent and Additives				Special functions that can be selected			Tempe-rature Selector	Programme selector knob
				Pre-wash	Wash	Fabric Softener	Chlo-rine bleach	Half Load	No spin	Rinse Hold		
			kg								°C	
1	**Cotton with pre-wash**	Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc). The max load for heavily soiled laundry is 3,5 kg.	5,0	❊	Yes	❊	❊	❊	❊	❊	Min. to 95	**1**
2	**Cotton**	Averagely soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc). The max load for heavily soiled laundry is 3,5 kg.	5,0	—	Yes	❊	❊	❊	❊	❊	Min. to 95	**2**
3	**Synthetic**	Averagely soiled textils in cotton, linen, polyester (Diolen, Trevira); polyamide (Perlon, Nylon), other synthetics or similar blends.	2,0	—	Yes	❊	—	❊	❊	❊	Min. to 60	**3**
4	**Cotton short Synthetic short**	Lightly soiled textils in cotton, linen, polyester (Diolen, Trevira); polyamide (Perlon, Nylon), other synthetics or similar blends.	2,5 2,0	—	Yes	❊	—	❊	❊	❊	Min. to 40	**4**
5	**Delicate**	Curtains and delicate synthetic textiles (dresses, skirts and blouses etc).	1,5	—	Yes	❊	—	—	❊	❊	Min. to 40	**5**
6	**Wool**	Only machine washable woollens with pure new wool label.	1,0	—	Yes	❊	—	—	❊	No	Min. to 40	**6**
A	**Rinse and Long spin**	With this programme you can add fabric softener or starch. The programme ends with a long spin cycle.	5,0	—	—	❊	—	❊	❊	❊	Min.	**A**
B	**Long spin**	This programme provides a long spin cycle, the same as the spin cycle in the Cotton programme.	5,0	—	—	—	—	—	—	—	—	**B**
C	**Rinse and short Spin**	With this programme you can add fabric softener or starch. The programme ends with a short spin cycle.	1,5	—	—	❊	—	—	❊	❊	Min.	**C**
D	**Short Spin**	This programme provides a short spin cycle, the same as the spin cycle in the Wool programme.	1,5	—	—	—	—	—	—	—	—	**D**
E	**Draining**	Drain only, without spin, e.g to unload the laundry earlier.	—	—	—	—	—	—	—	—	—	**E**

CONSUMPTION DATA

Programme		Water	Energy	Programme duration
		(l)	(kWh)	(min)
Cotton 95° C with pre-wash	1	80	2,00	120
Cotton 95° C	2	70	1,80	110
Cotton 60° C	2	70	1,20	110
Synthetic 60° C	3	60	0,90	85
Cotton short 40° C Synthetic 40° C	4	65 60	0,70 0,60	75 75
Delicate 40° C	5	80	0,60	70
Wool 40° C	6	80	0,60	65

SELECTING THE PROGRAMME

1. Turn the programme selector knob clockwise to the desired programme.
2. Set the temperature knob to the desired temperature.

PRESS THE DESIRED SPECIAL OPTION BUTTON

“Lightly soiled / Half load” button

- Reduces water consumption, above all during the rinse.
- Especially suitable for lightly soiled or small loads (reduce the detergent quantity).

“No spin” button

Press this button to exclude the spin function from the programme.

“Rinse hold / Spin delay” button

- The laundry remains in the last rinse water without being spun, to avoid heavy creasing.
- Especially suitable for the “Synthetic” or “Delicate” programmes, if the laundry is not to be unloaded immediately after the end of the programme.

Stopping “Rinse hold”

- Press the “Rinse hold” button again; the load will be spun according to the selected programme.

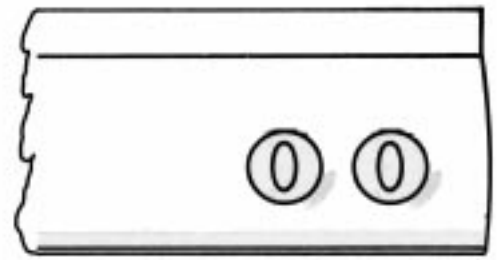

PROGRAMME START

1. Plug in the appliance.
2. Turn on the water supply tap.
3. Press the “On/Off” button.

DOOR LOCK

The door locks automatically after the programme start until the end of the programme.

PROGRAMME END

- The programme sequence indicator is at “Stop”.

1. Press the “On/Off” button.
2. Cancel the special options by pressing the appropriate buttons.
3. Turn the water supply tap(s) off.
4. Wait for the door to unlock (about 2 minutes).
5. Open the door and unload the machine.

Note: Do not fully close the door but leave it ajar to allow the drum to dry out.

PROGRAMME RESELECTION

1. Press the “On/Off” button.
2. Select the new programme, temperature and relative options.
3. Press the “On/Off” button.